


Respecting this instruction ensures efficient handling of the rack.



**Pinch hazard:
Watch your fingers!**

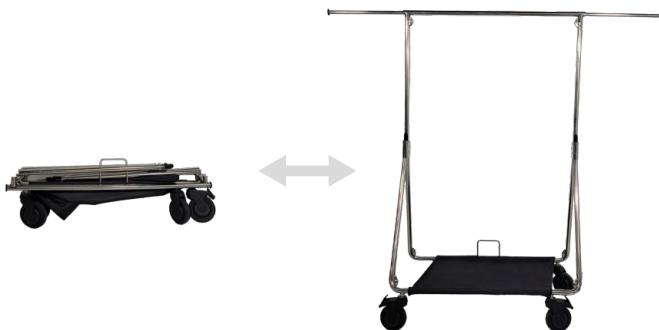

OPEN THE PRO RACK 15 s



Unfold the rack.



Raise the upper part until you hear two "clicks".



Use your feet to open the lower part.

CLOSE THE PRO RACK 20 s



With your palms, press on both latches.

 Be careful not to pinch yourself.



Use your feet to close the lower part.



Fold the rack.